



A Cutout for Electrical power cable, drain hose and water inlet hose either left of right side depending on kitchen design

B Waterproof board or similar to ensure the floor under the dishwasher is level with the finished kitchen floor otherwise inability to remove dishwasher may negate warranty.