



Installing cooktop to a vertical panel

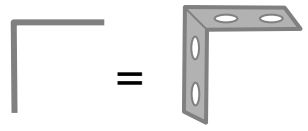

- 1) Use an L-Shaped angle bracket when installing the ceramic cooktop into a vertical panel
- 2) Using screws provided partly screw angle bracket into base of cooktop leave a 5 to 7 mm gap
- 3) Using wood screws affix angle bracket to vertical panel pull bracket down to ensure gap is maintained to cooktop – affix wood screw fully to hold bracket tight against vertical panel.
- 4) Finally slowly tighten screw into cooktop base to assist in pulling cooktop down against benchtop – Do not overtighten the screw as damage may occur to ceramic glass top

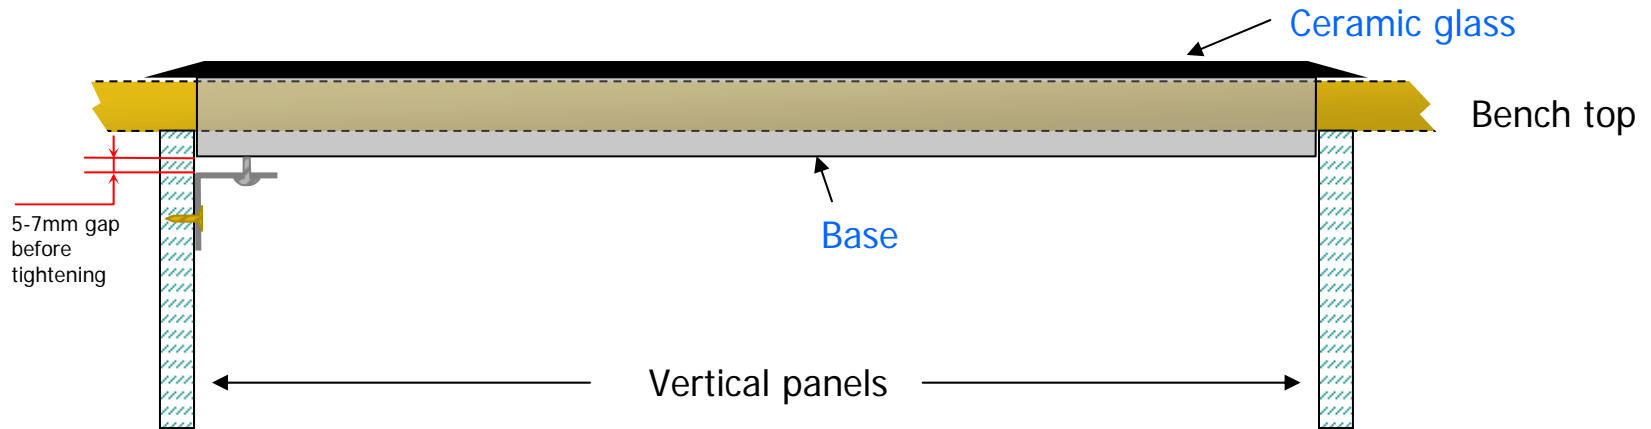

SPECIALIST APPLIANCE SUPPLIER TO THE KITCHEN INDUSTRY